TP164 Pirate Galleon

Instructions for assembly, maintenance and safe use. Please retain for future reference.





THIS PRODUCT CONTAINS SMALL PARTS AND IS NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS. SMALL PARTS ARE A CHOKING HAZARD.

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN AGED 3-10 YEARS.

ONLY FOR DOMESTIC USE. FOR OUTDOOR USE ONLY. TOY MUST BE ASSEMBLED BY AN ADULT BEFORE USE. CHILDREN MUST NOT USE THIS PRODUCT UNTIL PROPERLY INSTALLED. ADULT SUPERVISION REQUIRED. REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILDREN.

RETAIN PACKAGING FOR FUTURE REFERENCE. ANCHORS THAT ARE SUPPLIED WITH THIS PRODUCT MUST BE FITTED BEFORE USE.

WARNING: MAXIMUM COMBINED USER WEIGHT 150KGS



Robovision Ltd t/a TP Toys Unit 11, Enterprise Way, Flitwick, Bedfordshire, MK45 5BX England www.tptoys.com


Important advice for assembly, maintenance and safe use

- 1. Toy must be assembled by an adult before use exactly in accordance with the instructions.
- 2. Children must not use this product until properly installed.
- 3. Check all parts are present before you start to assemble the product. Place small parts on a tray or similar to ensure they are not lost. The manufacturing process can very occasionally result in sharp edges/waste material so please take care when assembling this product.
- 4. If any parts are missing do not use the product until the replacement parts are fitted.
- 5. Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.
- 6. Ensure your product is located on a soft impact surface like grass. Never locate your product on a hard surfaces like concrete.
- 7. Anchors supplied with this product must be fitted before use.
- 8. In freezing weather, detachable plastic parts should be stored inside.
- 9. Avoid locating this product in full sun.
- 10. Remove all packaging before giving to your children or allowing them to play with this product.
- 11. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe. Pay special attention to all connections and fastenings.
- 12. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
- 13. Any changes to this toy including changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
- 14. Ensure children's clothing is appropriate for the play activity.
- 15. Never place toys near a fire.
- 16. Take care in wet weather. Toys can become slippery.
- 17. In high winds, ensure outdoor toys are moved to a sheltered position and/or securely staked down.
- 18. The age recommendation for this product is clearly stated on the packaging and in these instructions. Please adhere to it at all times. Adult supervision is required at all times to ensure children play safely.
- 19. When you dispose of this equipment please do so responsibly.

Safe play free space area

The safe play area refers to the zone extending 20cm around the toys on all sides and 250cm above the toy. The safe play area must be free from all obstacles.



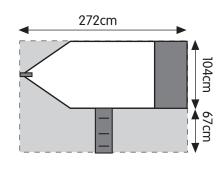

Height to front platform: 68cm Height to rear platform: 88cm Height to rear guardrail: 140cm Maxiumum height of this set: 206cm



Know About Wood


Unlike steel, wood is a natural, organic material and each piece will be unique, bearing its own knots, cracks and variations in colour and, unlike steel, wood will react significantly to changes in atmospheric conditions.


Wood will expand and contract as fluctuations of temperature and humidity affect the water content of the cell structure. In warm sunny weather it will shrink and in wet weather it will expand. As these physical changes do not, necessarily, take place uniformly throughout a piece of wood, forces are set up which cause cracks and splits to arise.


It is not necessary to stain your Wooden frame.


It is made from selected wood which has been pressure treated. This is a process by which preservatives are forced under pressure into the fabric of the timber to protect it from decay and insect damage.


If you do wish to stain your Wooden frame for aesthetic reasons, please use a water-based stain, which is available from any good DIY store.

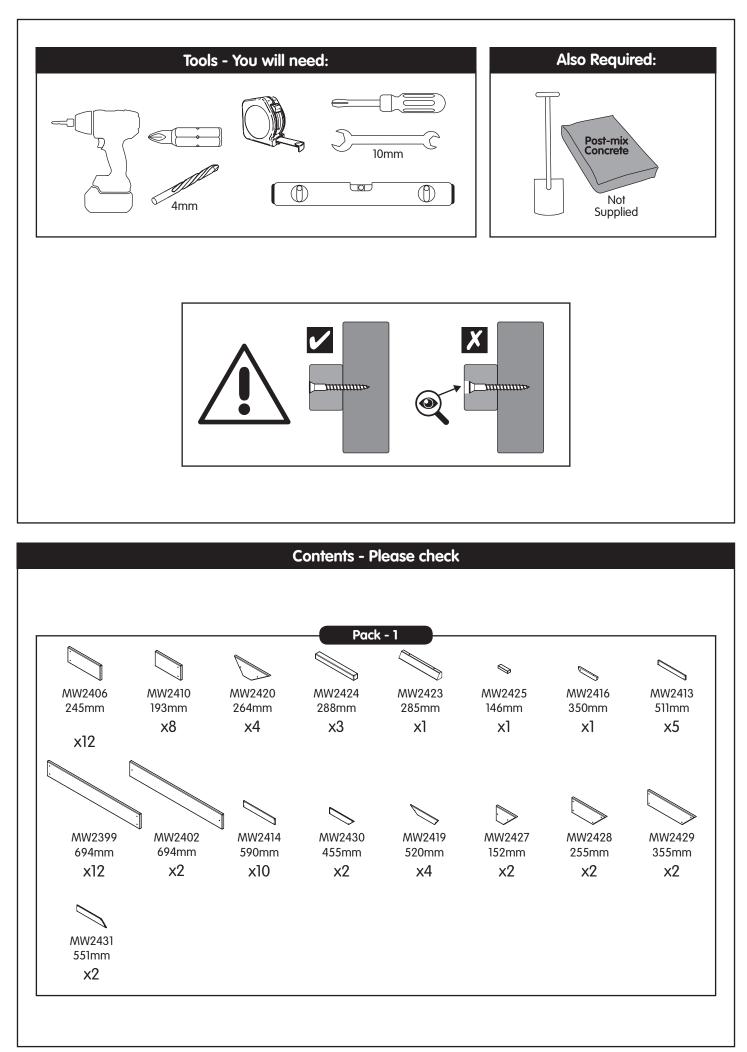


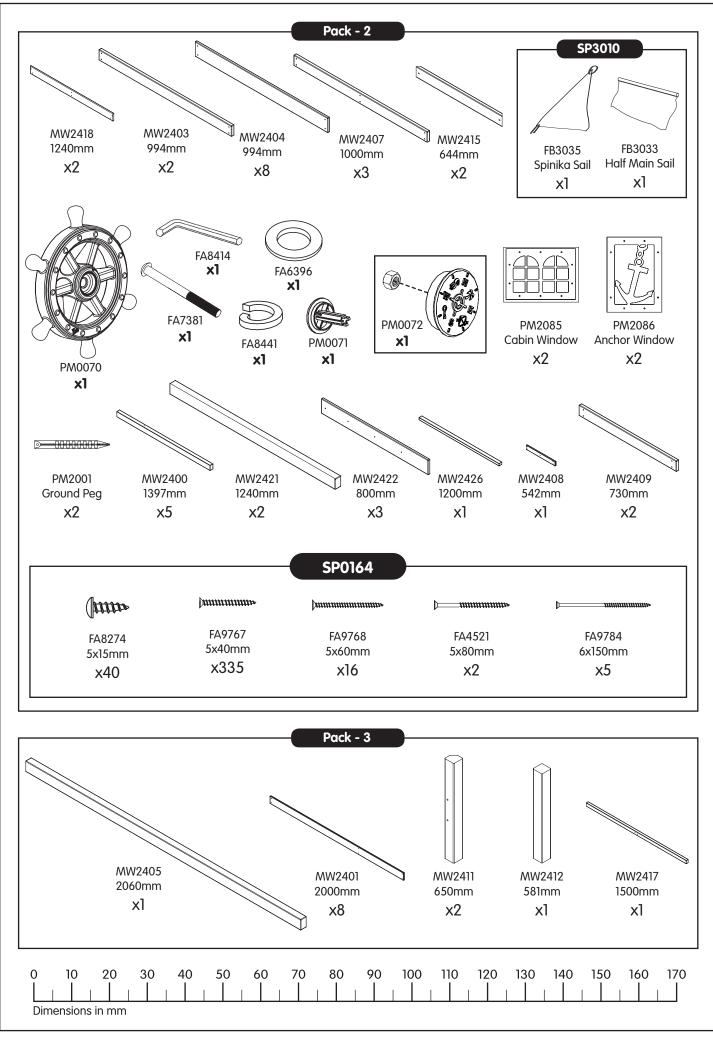


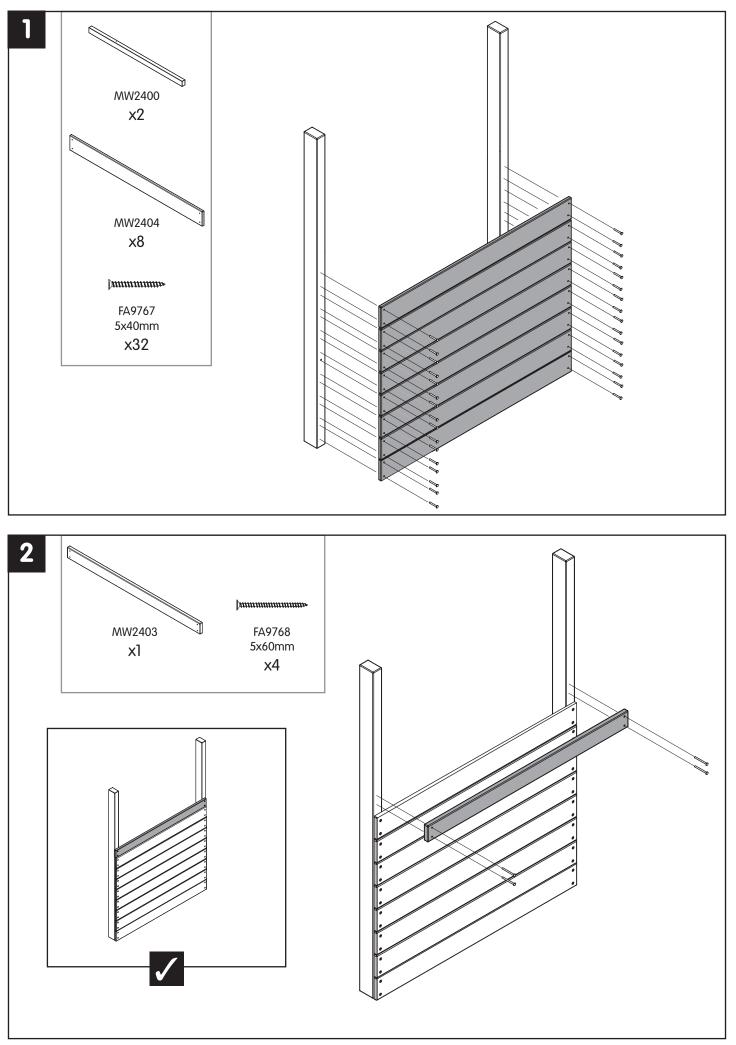


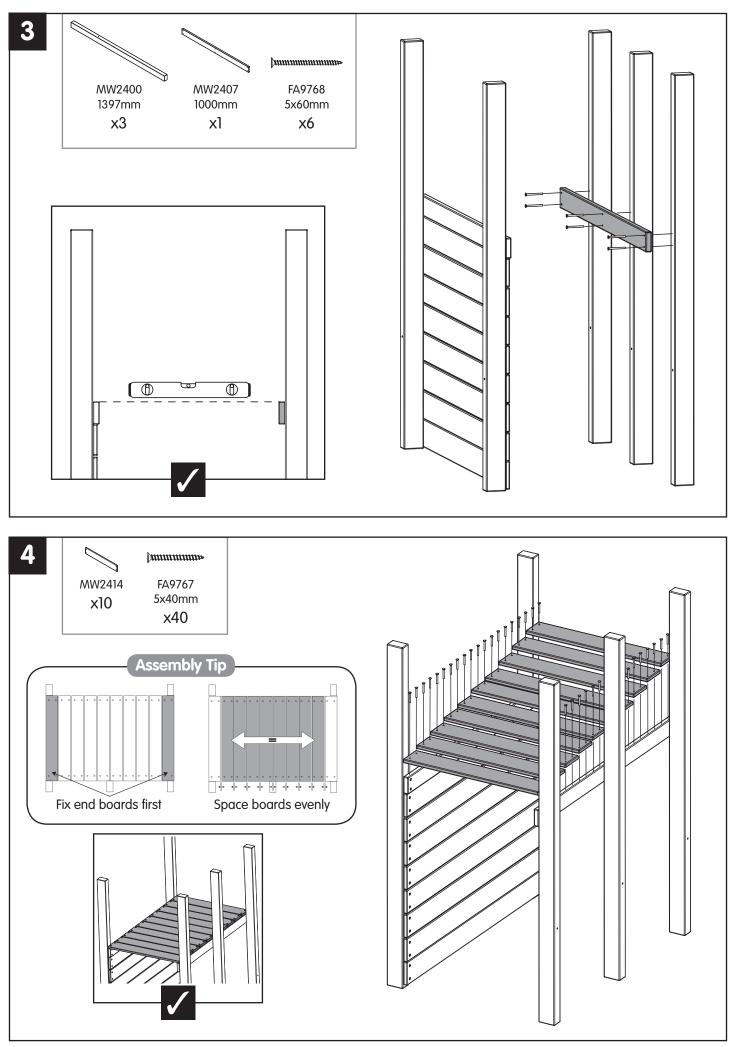


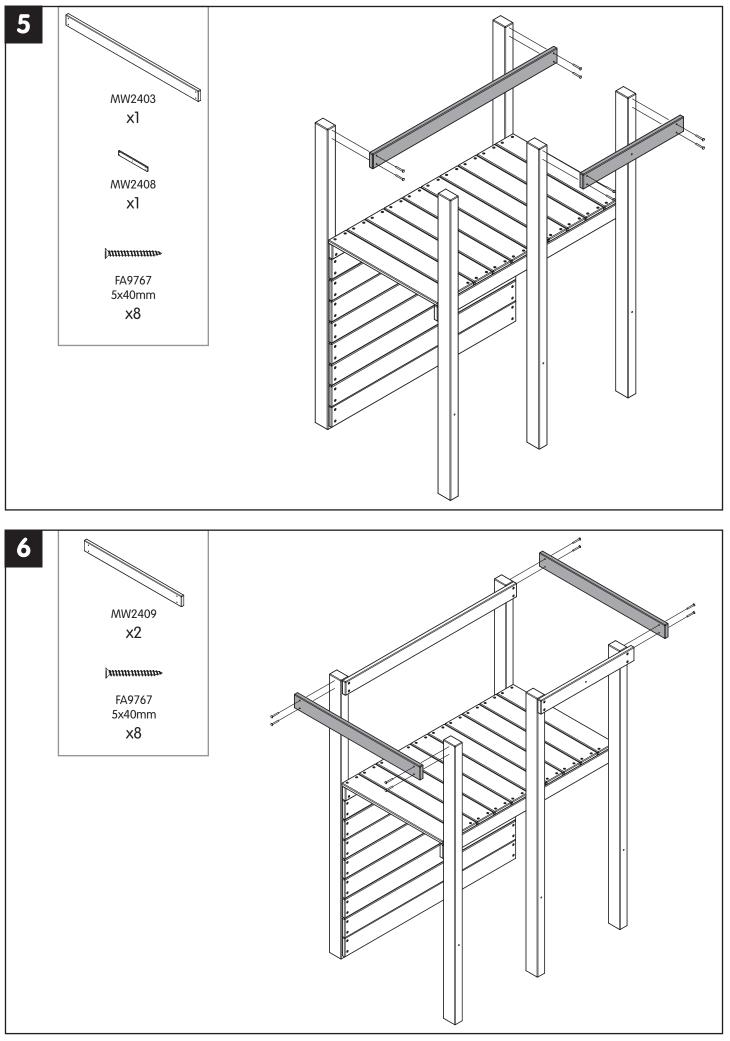


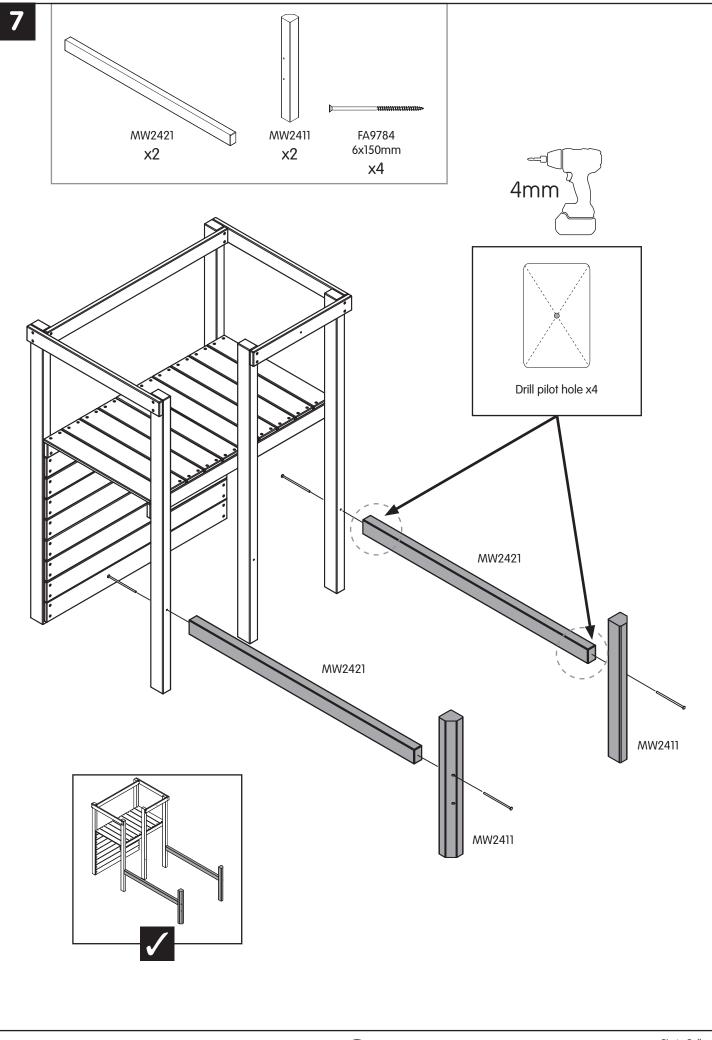


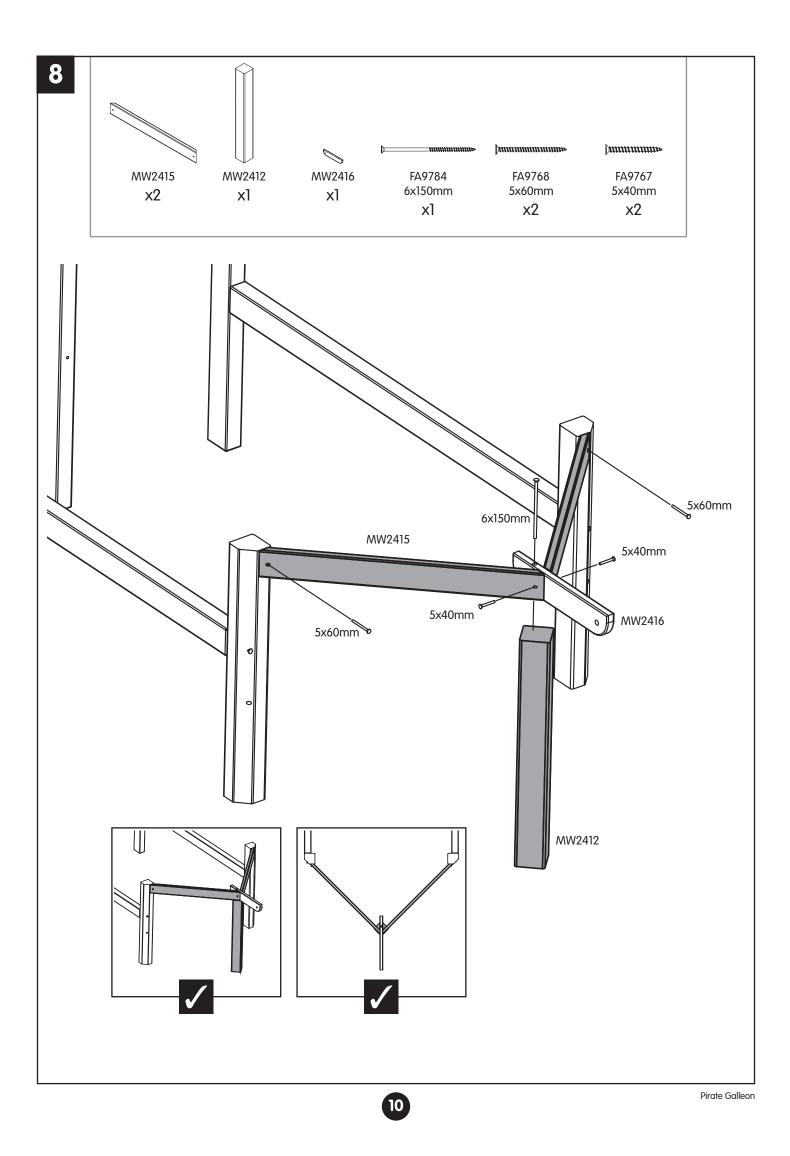


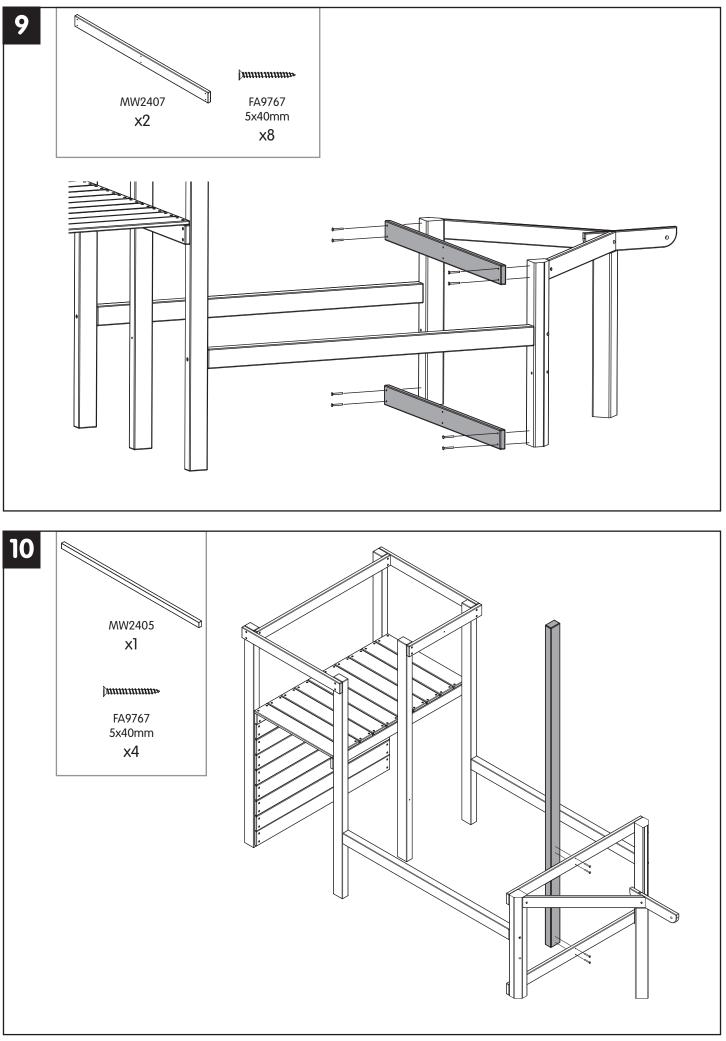


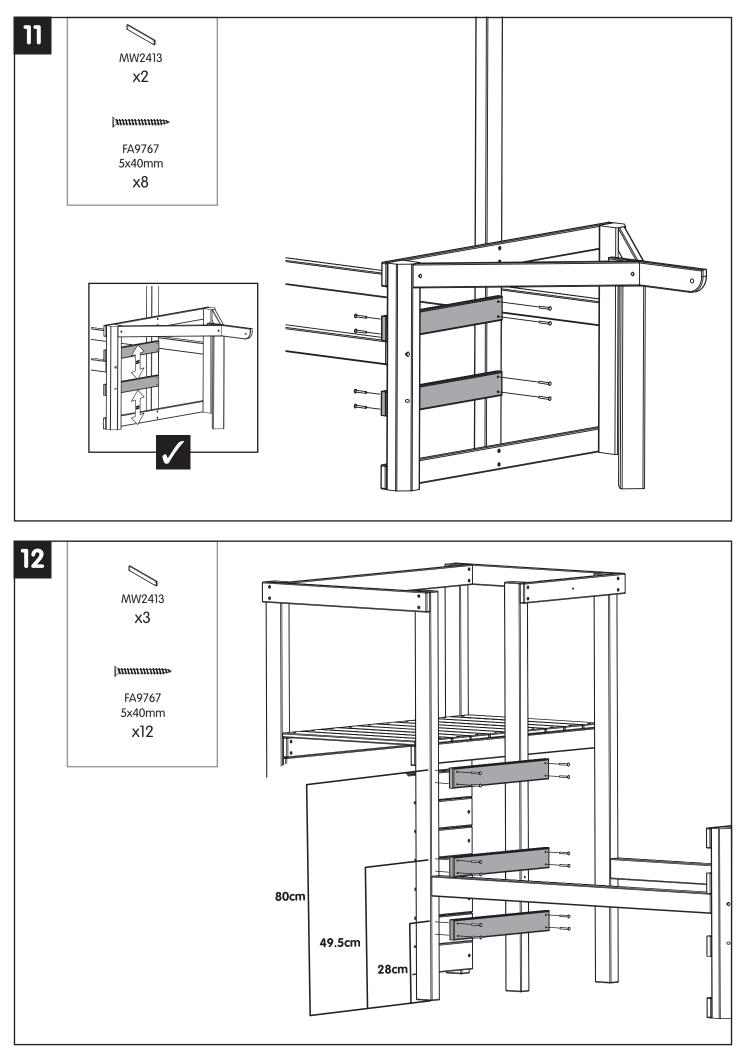


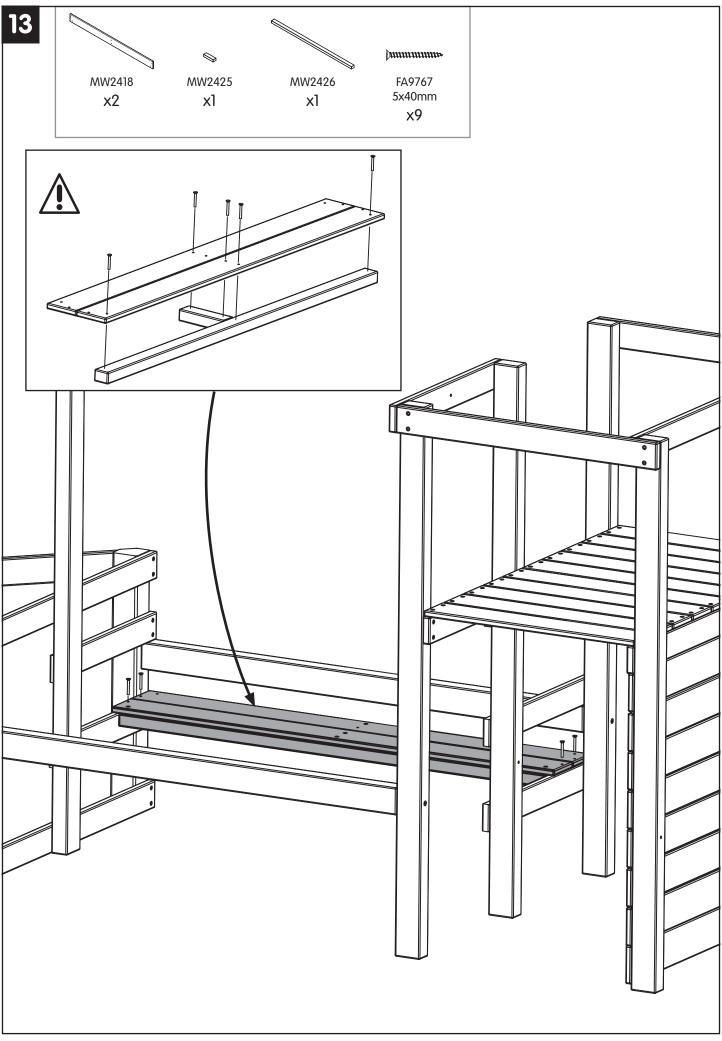


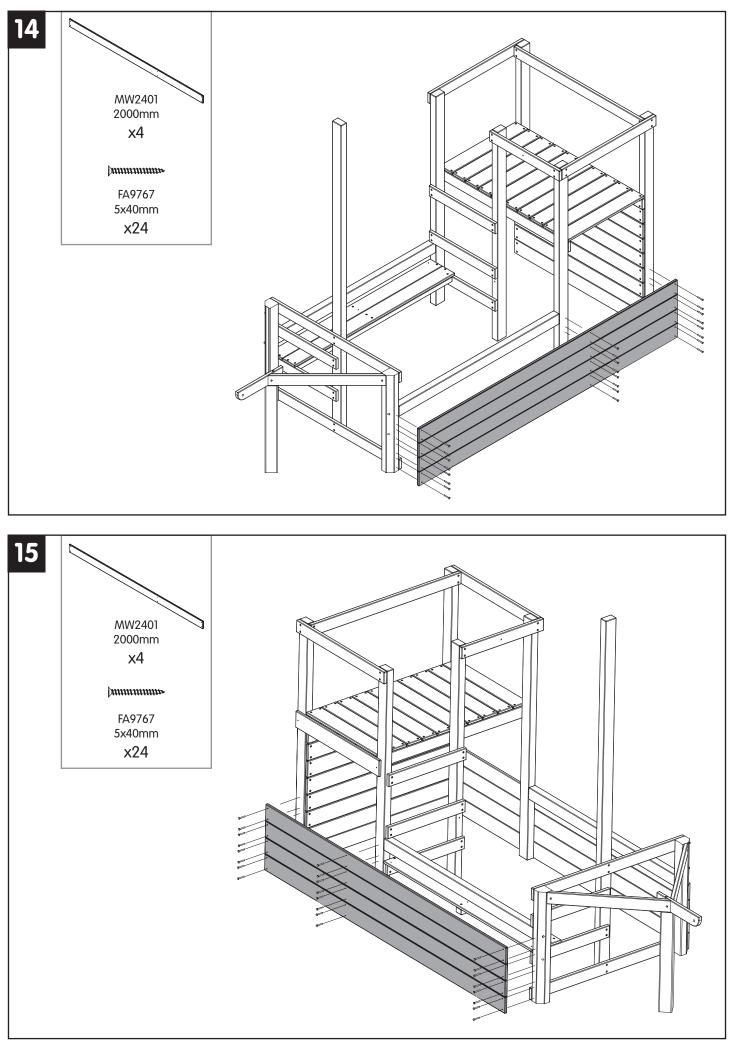


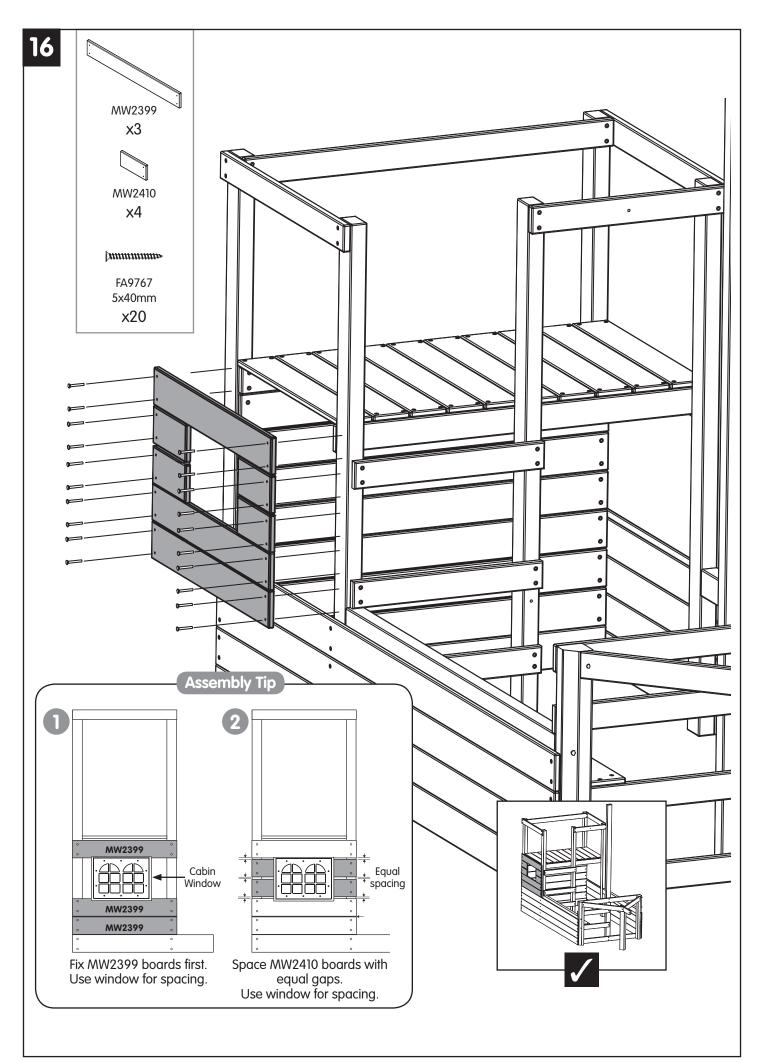


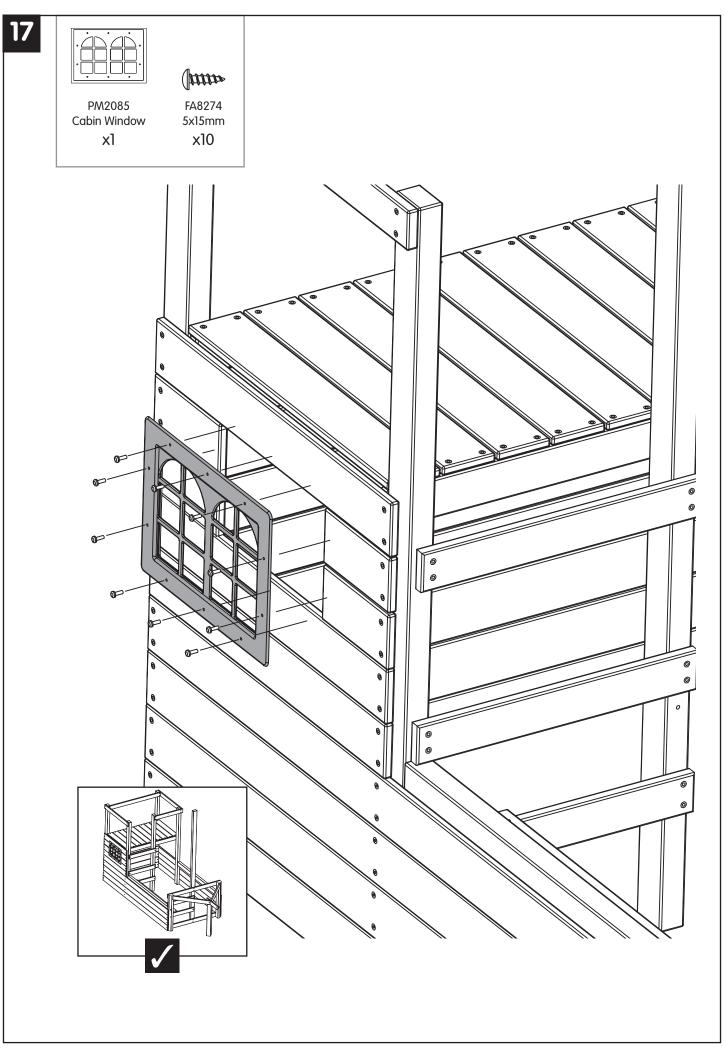


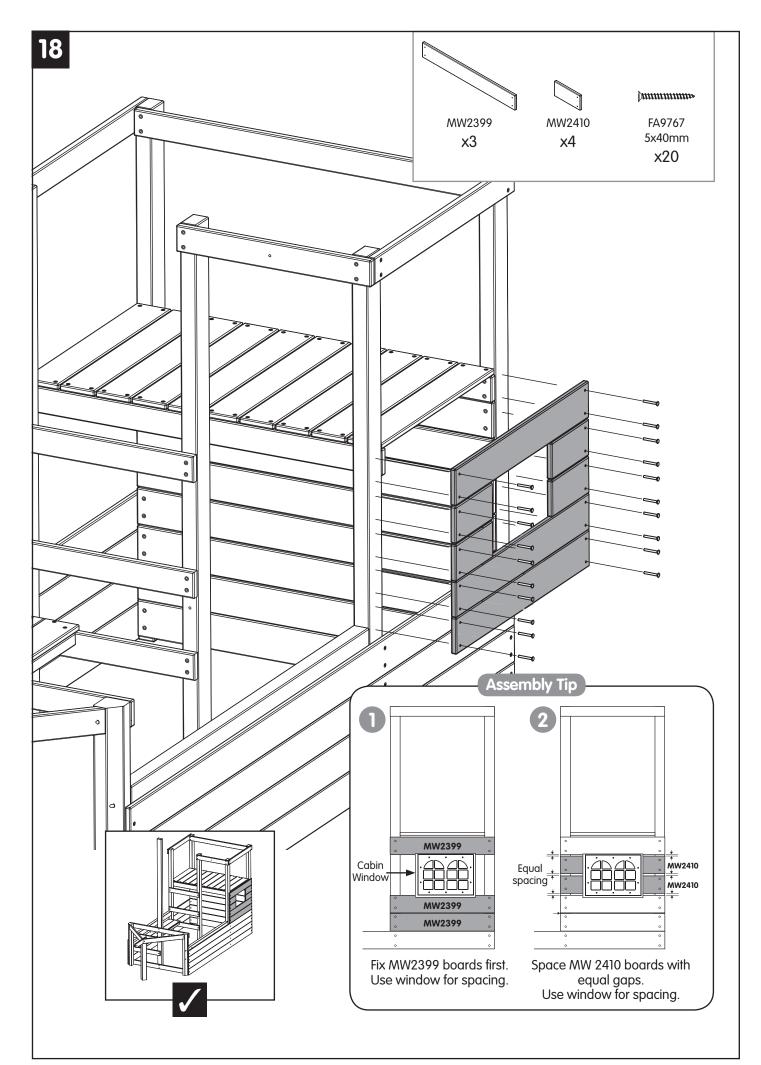


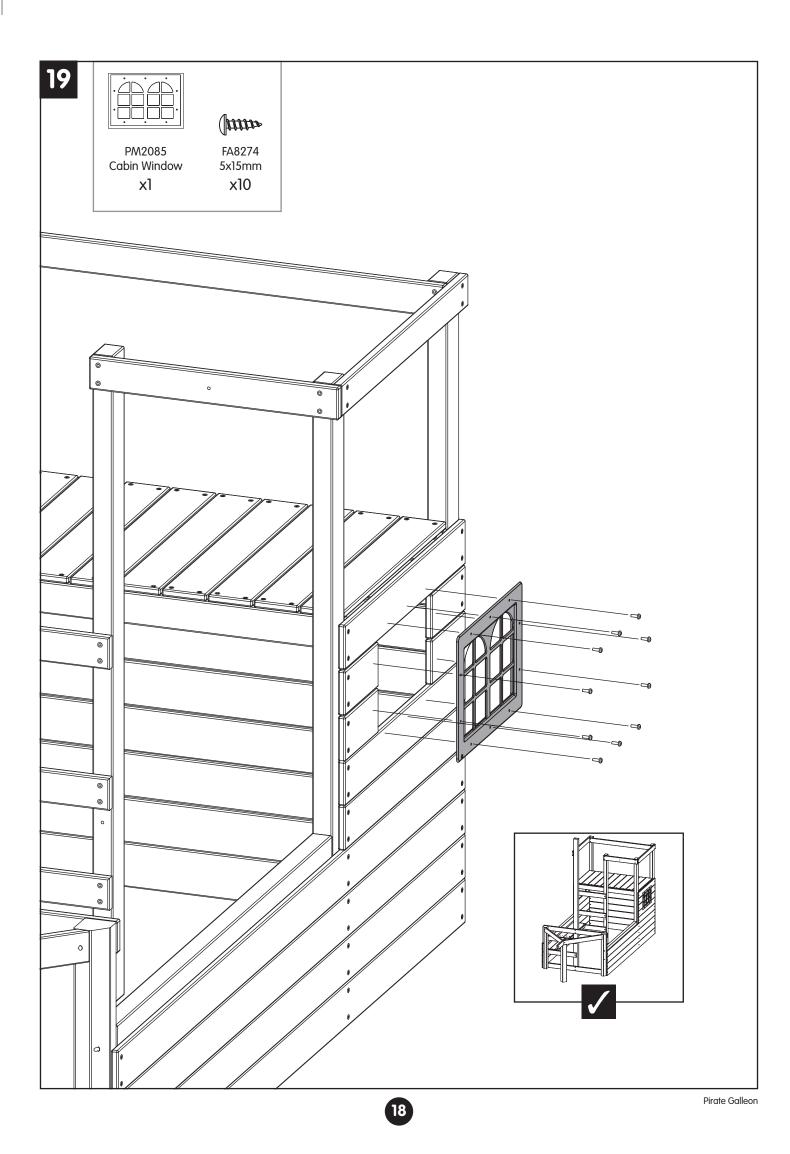


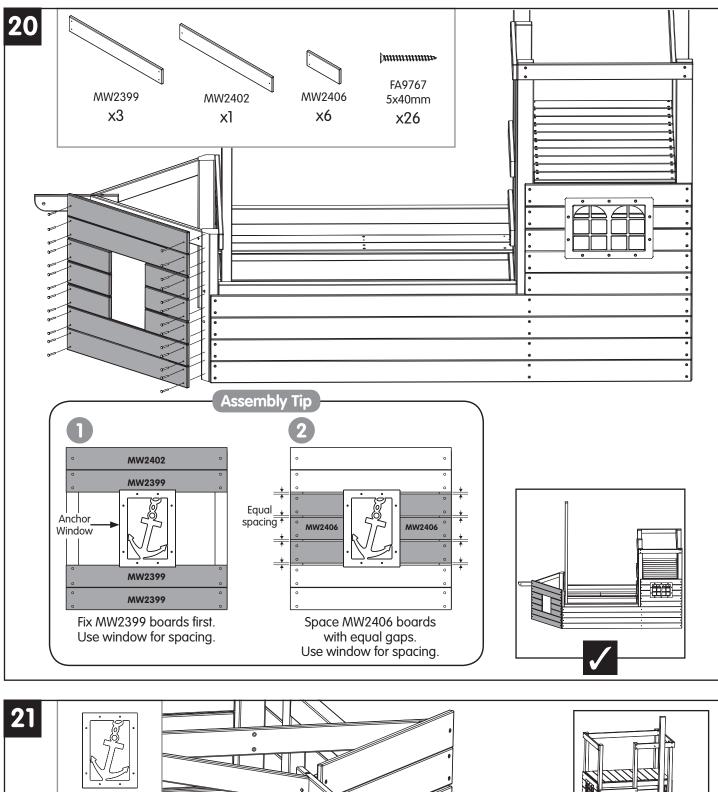


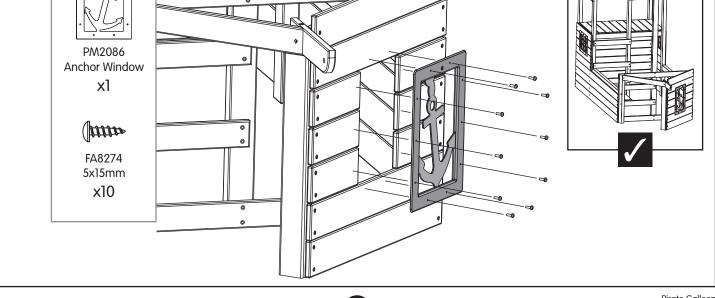


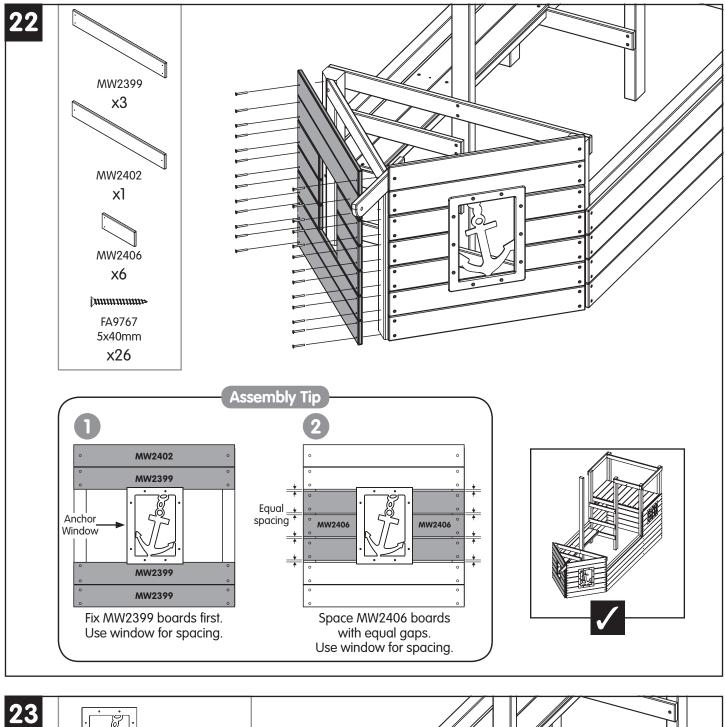


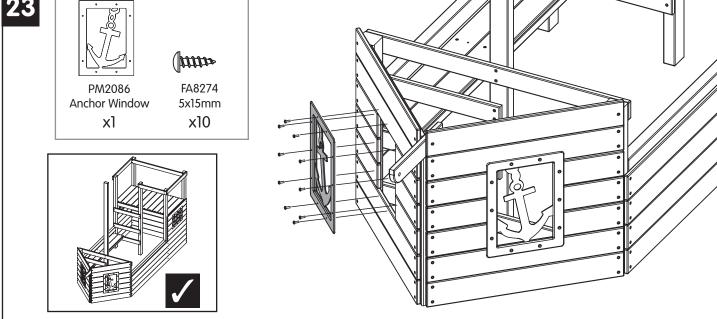


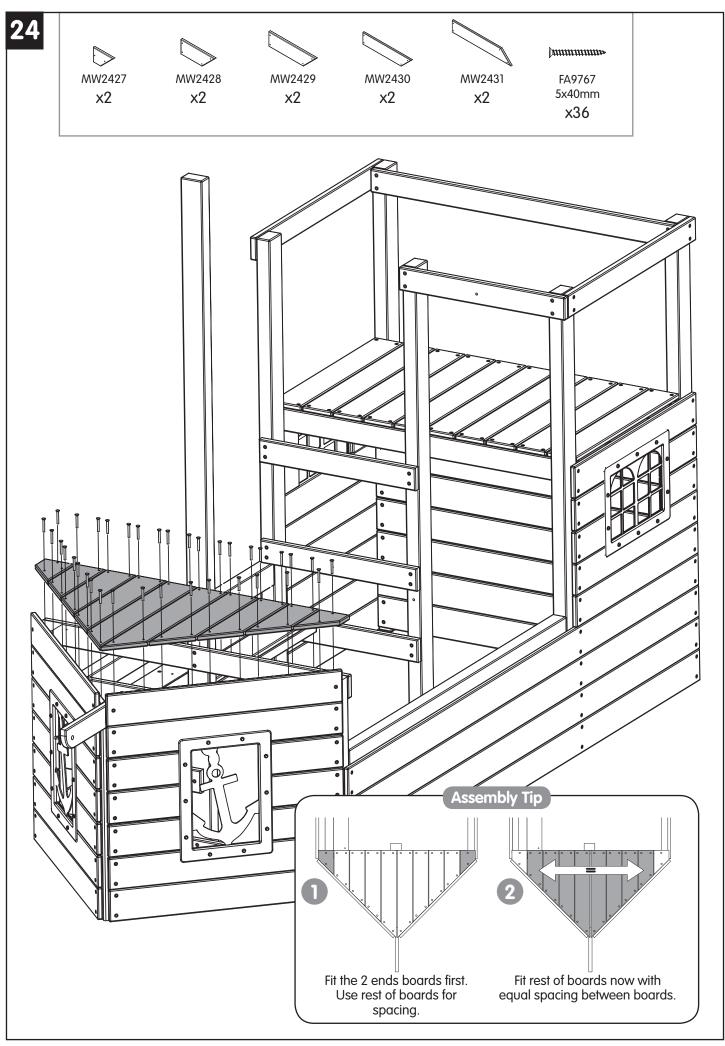

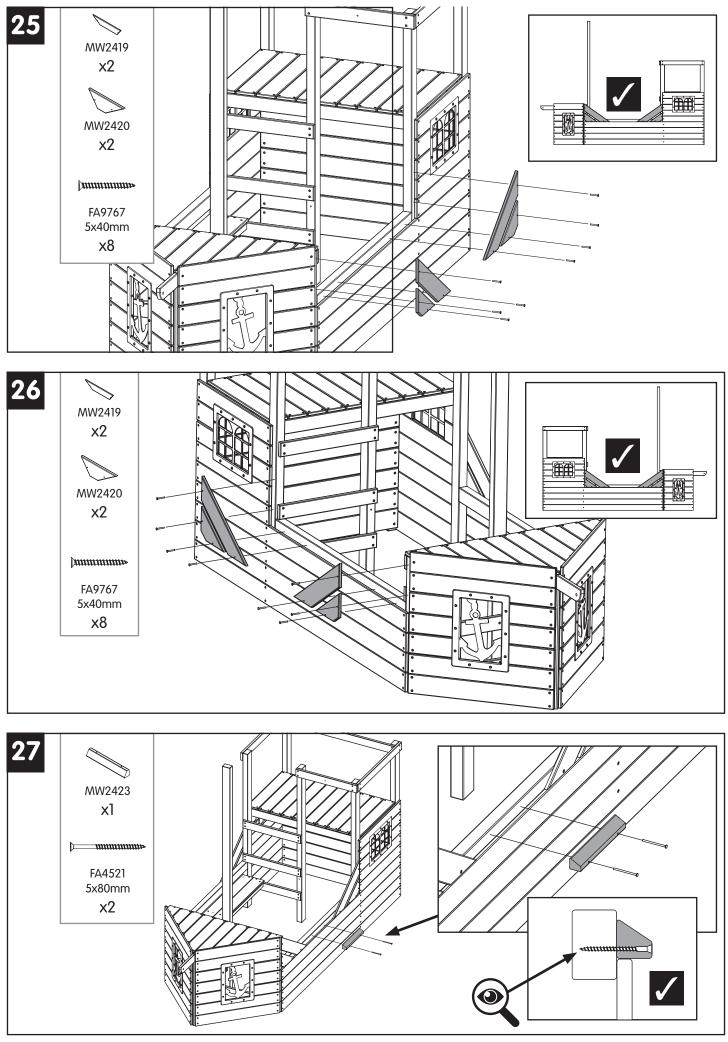

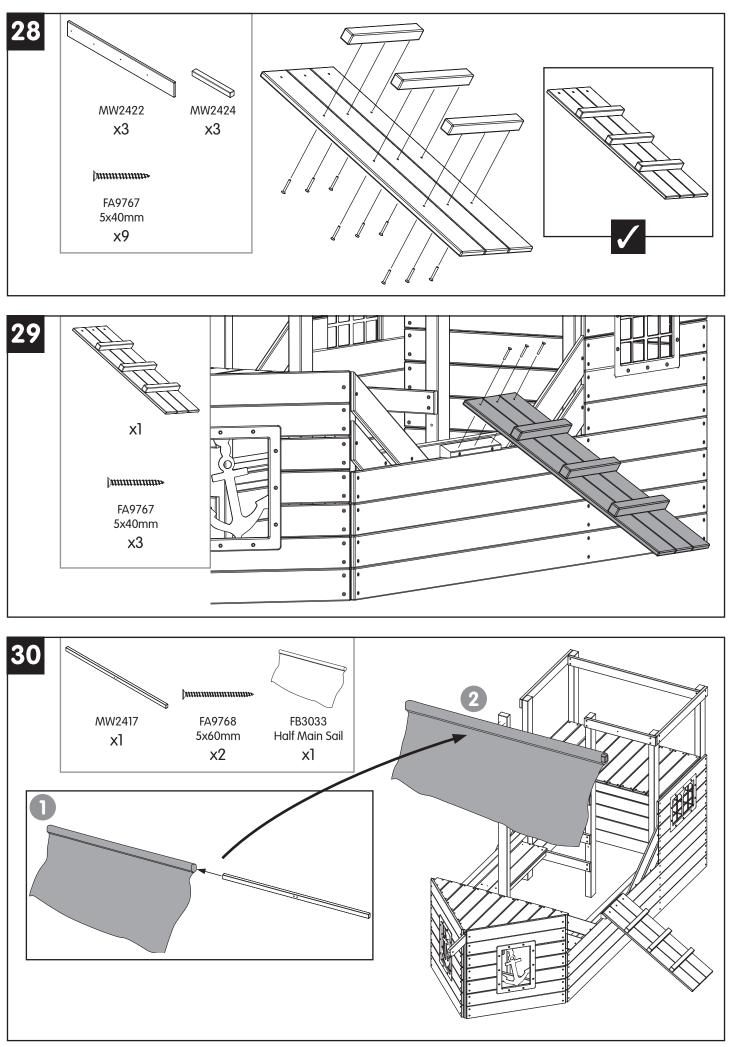

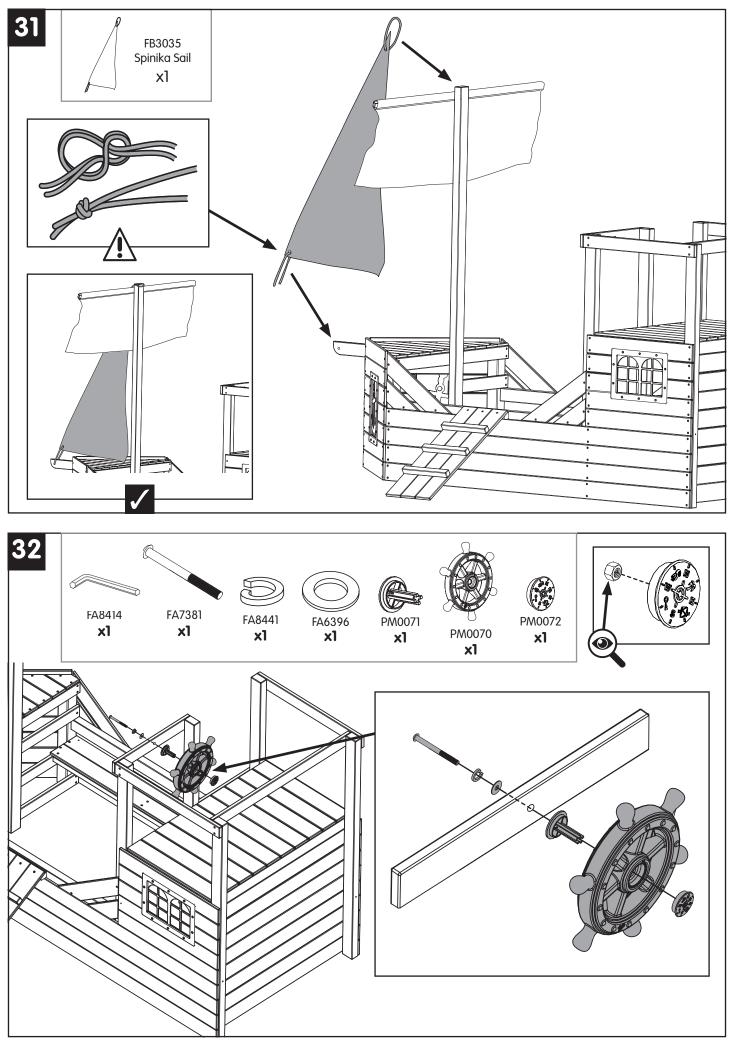

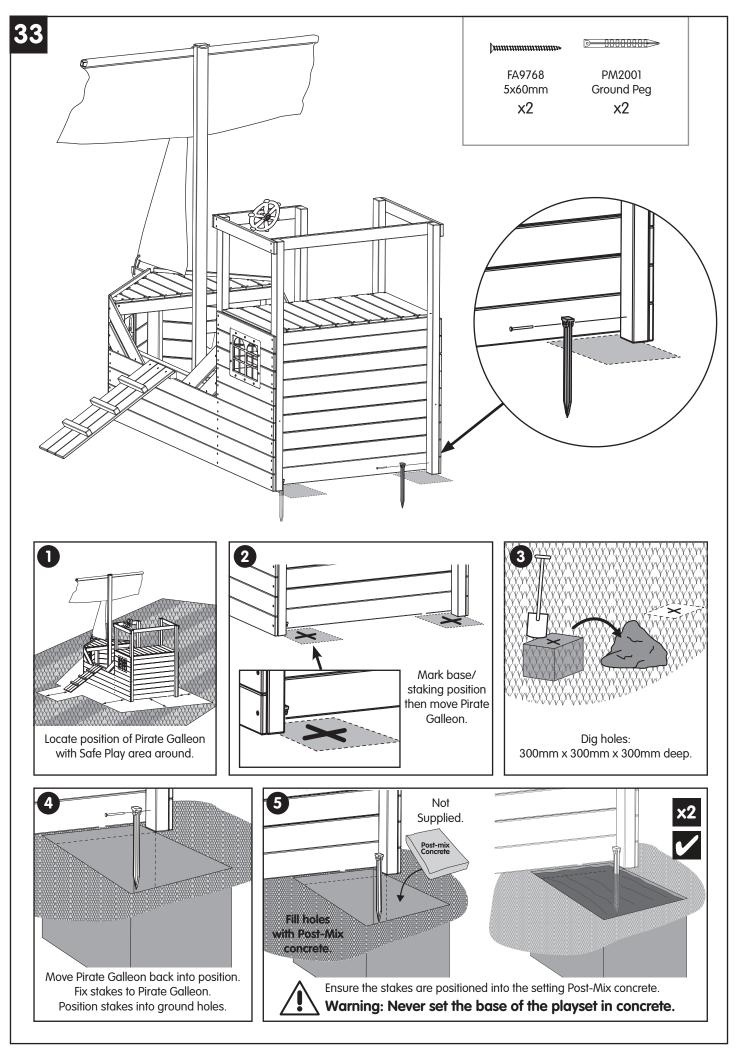











Thank you

Thank you for purchasing this product. Please register your new product on line at tptoys.com www.tptoys.com/customer/productregistration

Find out about the guarantee for this product, visit www.tptoys.com/customer/pages/guaranteeinformation

For customer services and help with your product, visit **www.tptoys.com/customer/help**

Your TP Guarantee Number/Product Batch No is

TP Part No: IN0116 Issue-F 30.10.19